

Xerox Phaser 4600/4620
Laser Printer
Imprimante laser




Xerox® Phaser® 4600/4620 Installation Guide Guide d'installation

- | | | | |
|--------------|--------------------------|------------|---------------------------|
| ■ Italiano | Guida all'installazione | ■ Polski | Instrukcja instalacji |
| ■ Deutsch | Installationsanleitung | ■ Magyar | Üzembe helyezési útmutató |
| ■ Español | Guía de instalación | ■ Русский | Руководство по установке |
| ■ Português | Guia de instalação | ■ Türkçe | Kurulum Kılavuzu |
| ■ Nederlands | Installatiehandleiding | ■ Ελληνικά | Εγχειρίδιο εγκατάστασης |
| ■ Svenska | Installationshandledning | ■ 简体中文 | 安装指南 |
| ■ Norsk | Installasjonsveiledning | ■ 繁體中文 | 安裝手冊 |
| ■ Dansk | Installationsvejledning | | |
| ■ Suomi | Asennusopas | | |
| ■ Čeština | Instalační příručka | | |




73000118 Rev. A
© 2011 Xerox Corporation. All rights reserved.



1

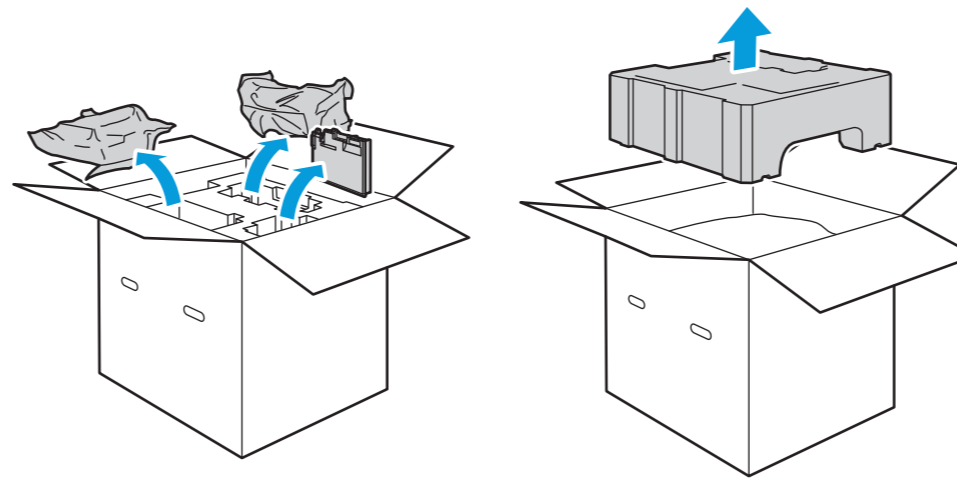


2

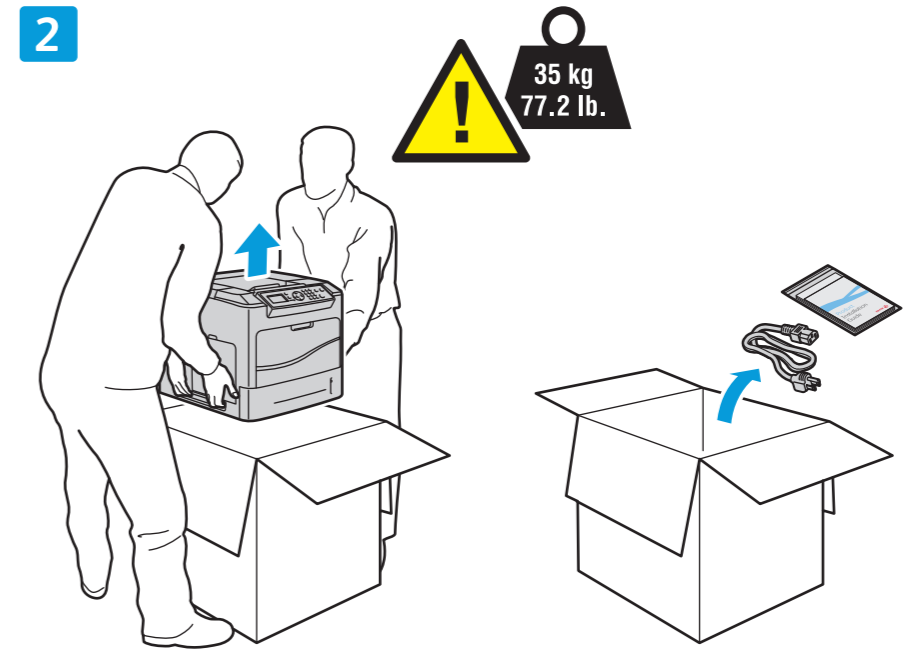


3

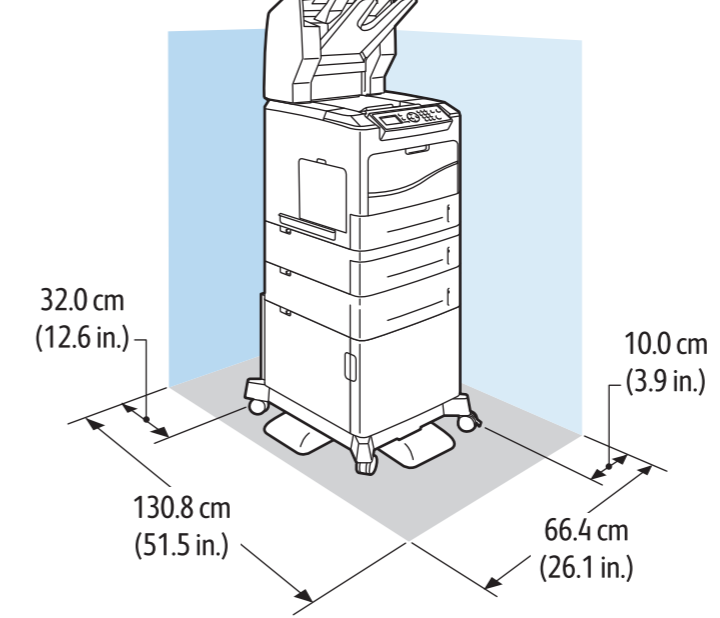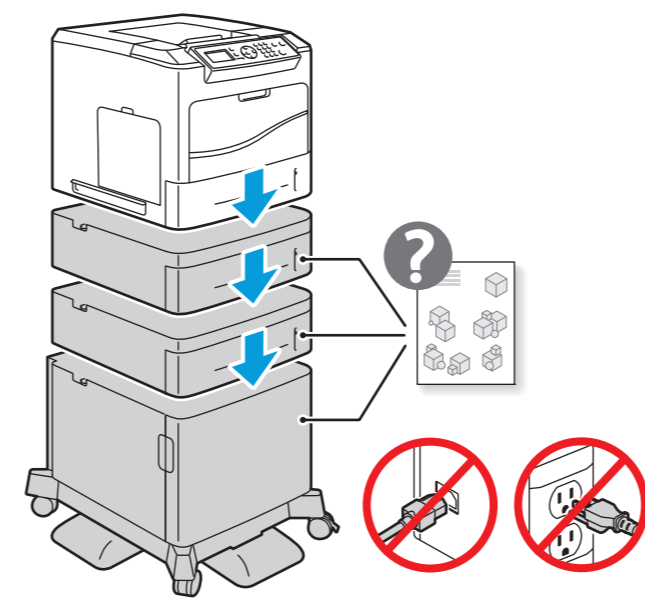


4

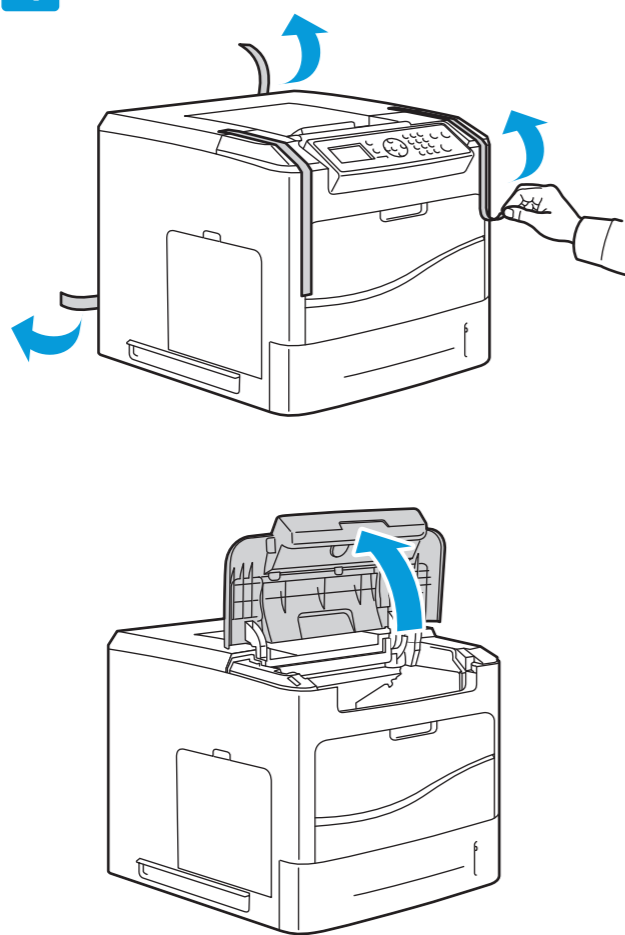


5

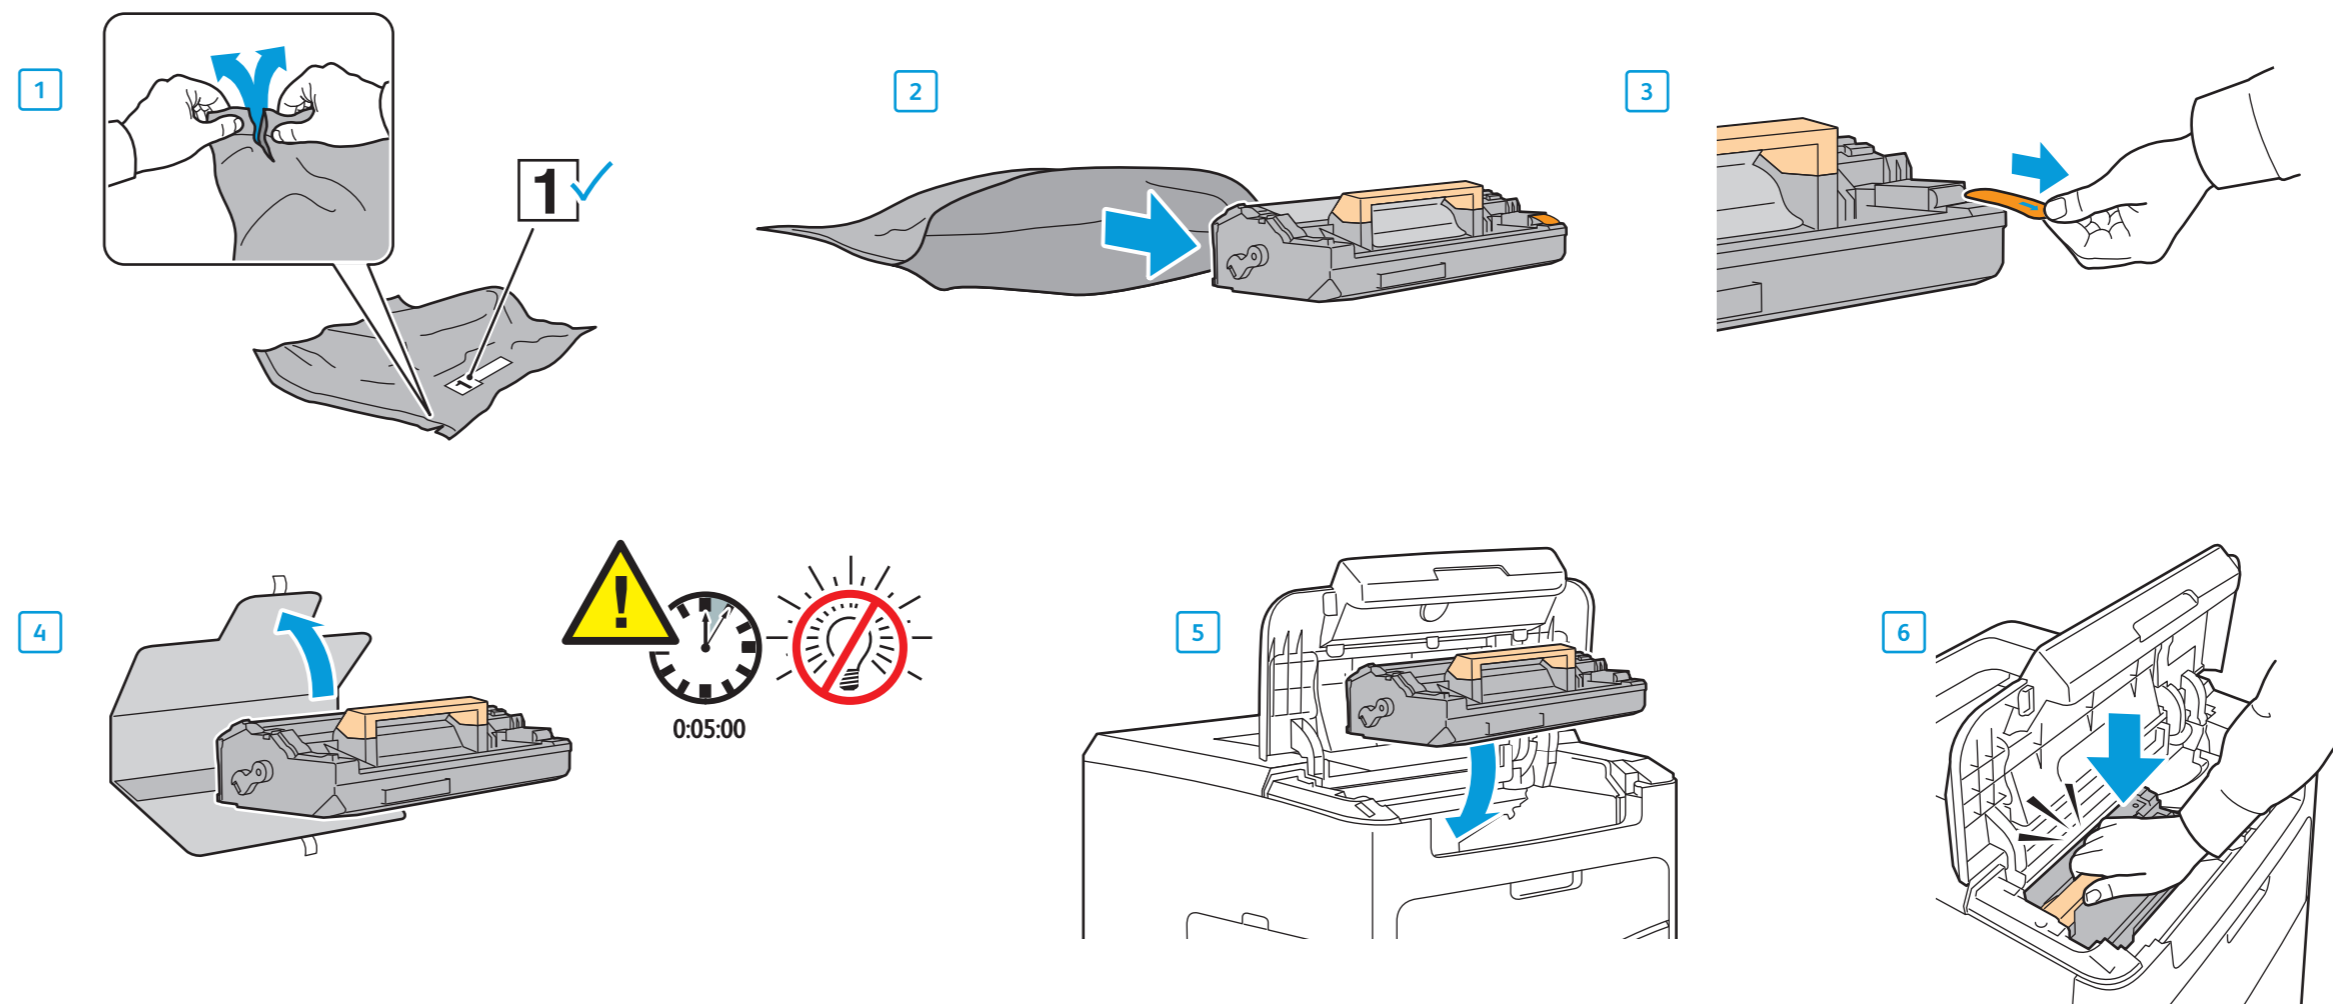

6

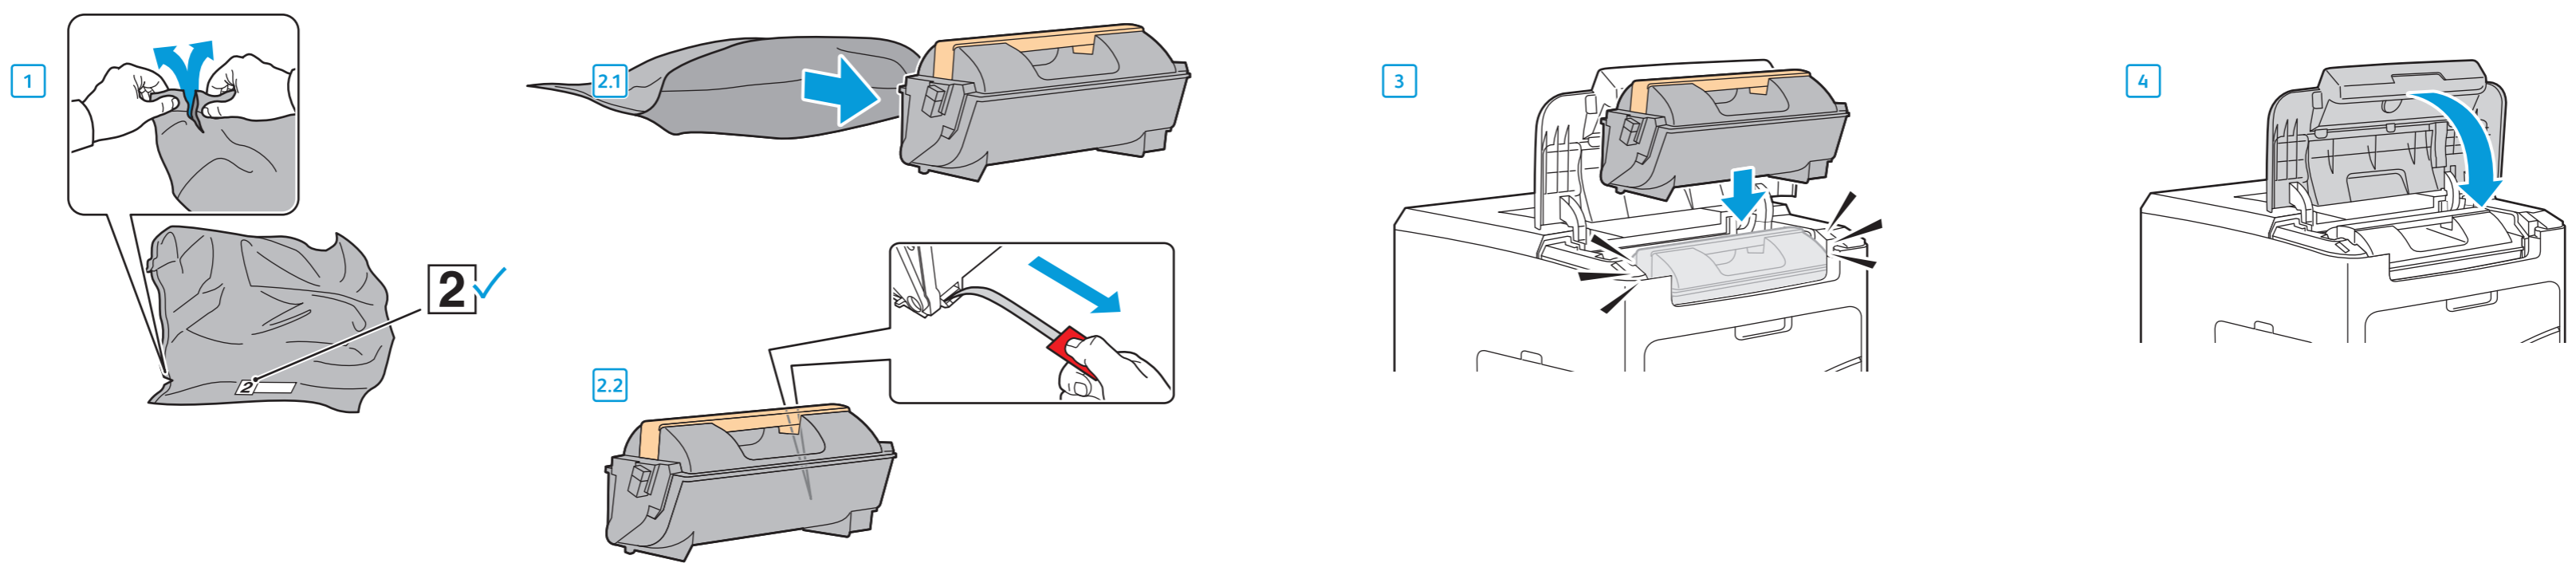

7

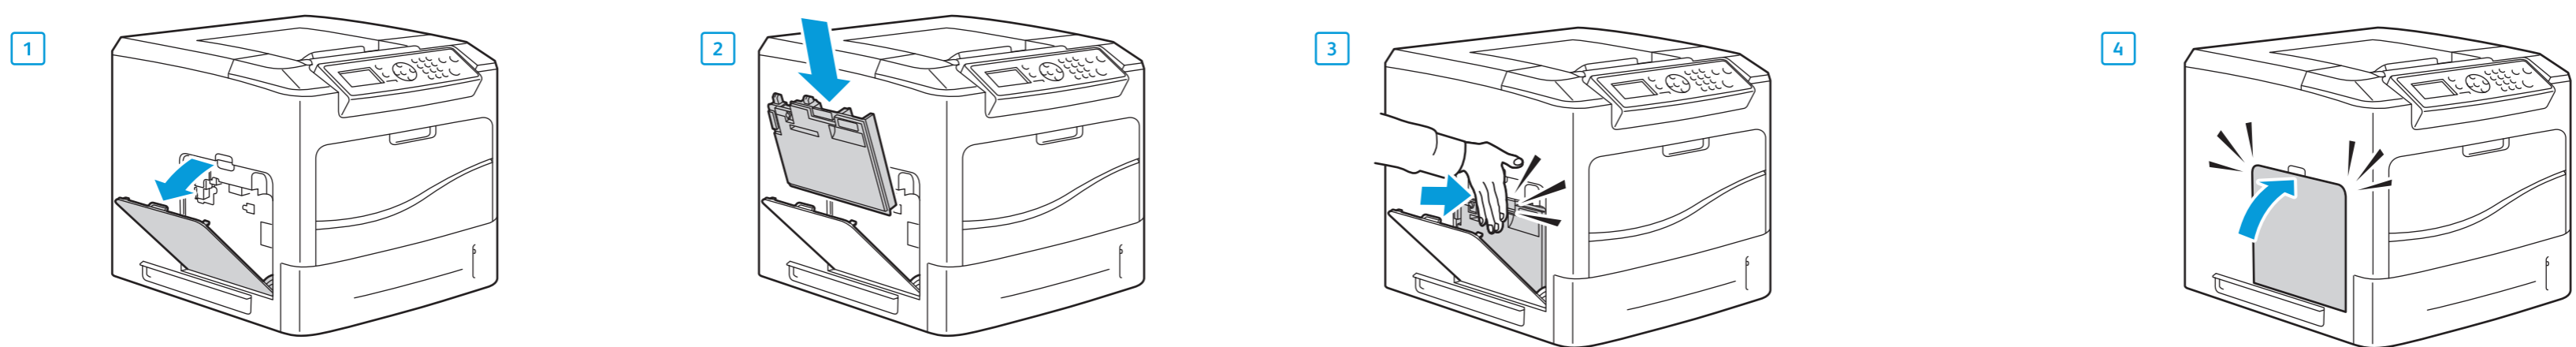

8



